

# COMPRESSOR **IS** RUNNING - INSUFFICIENT COOLING

NOTE: If system is air cooled or pumped-water cooled, first check for correct fan or water pump operation.

